

- 1.Remove rubber ring from steel support as picture 1.
- 2.Pull all wire thru steel support as picture 2.
- 3.Cut black wires at the length to the middle of steel support as picture 3.



Picture 1



Picture 2



Picture 3

- 4.Replace the rubber ring as picture 4
- 5.Get a black electric wire. (picture 5)
- 6.Pull the black electric wire thru steel support. (picture 6)



Picture 4



Picture 5



Picture 6


- 7.Remove PVC coat from the tip of black electric wire as picture 7.
- 8.Add appropriate shrinkable PVC tube to each wire. (picture8 and 9)



Picture 7



Picture 8

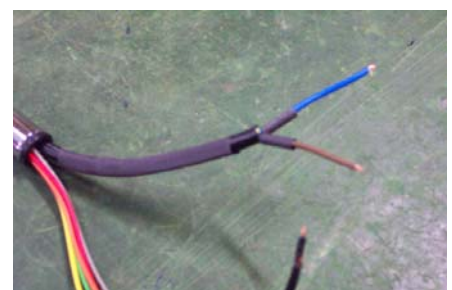

Picture 9

9. Connect black wires respectively and shrink the PVC tubes with heat gun. as picture 10 and 11.




Picture



Picture 11

10. Connect the signal wire as below to complete.

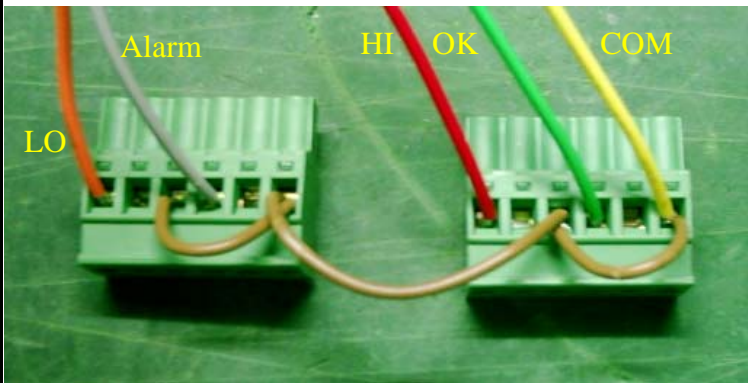

Picture 13



Picture 14